



PLEASE READ CAREFULLY & RETAIN FOR FUTURE REFERENCE

IMPORTANT SAFEGUARDS

- Before use, please read and follow these instructions carefully, even if you feel you are familiar with the product.
- They contain important information regarding the safe use and maintenance of the product.
- Please retain these instructions for future use and reference.

ATTENTION


- Inspect for signs of wear or damage before each use
- Only suitable for use on level ground
- Distribute weight evenly
- Not for standing, do not use as a ladder
- Keep hands clear of hinges when folding/unfolding
- Supervise children when in use
- Take care when using on smooth/polished flooring
- **Max load - 150kg**

DO NOT STAND ON STOOL



FEATURES

- Portable lightweight stool
- For domestic and camping use
- Quick and easy twist opening
- Adjustable height
- Collapsible design
- Easy to carry and store
- Non-slip base
- Sturdy design and supports up to 150kg

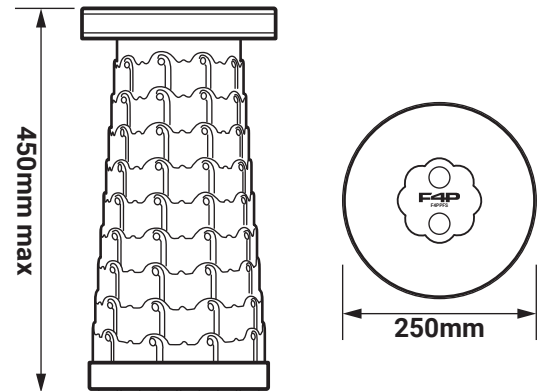

Product Ref	Description	Load Capacity (kg)	Colour	Material	Weight (kg)	Expand Size (cm)	Storage Size (cm)
F4PPFS	Portable Collapsible Stool	150	Black / Red	Polypropylene (PP) with nylon webbing handle	1.014	25 x 45	25 x 7

USER ASSEMBLY INSTRUCTIONS

1. Place thumb and index finger into the dedicated holes on either side of the stool. Twist and pull apart to open the stool.



2. Expand the stool by pulling it upwards to the desired height.



3. Twist the stool until it clicks, locking it into place at the desired height. - ensure the mechanism has clicked into place before use.



4. The stool comes with a non-slip base. Only suitable for use on level ground. **NOTE:** Take care when using on smooth/polished flooring.



CARE & CLEANING

- Use extra care when handling the stool.
- Distribute weight evenly when sitting.
- There are no repairable or replaceable parts. If malfunctioning, discard responsibly following local recycling regulations.
- Clean with a soft, damp cloth.
- Avoid using detergents or abrasives.
- Do not scrape the surfaces.